




# Nikon Coolpix P100 Viewfinder Replacement

This guide will show you how to replace the camera's flash

Written By: Nghiem Ngo

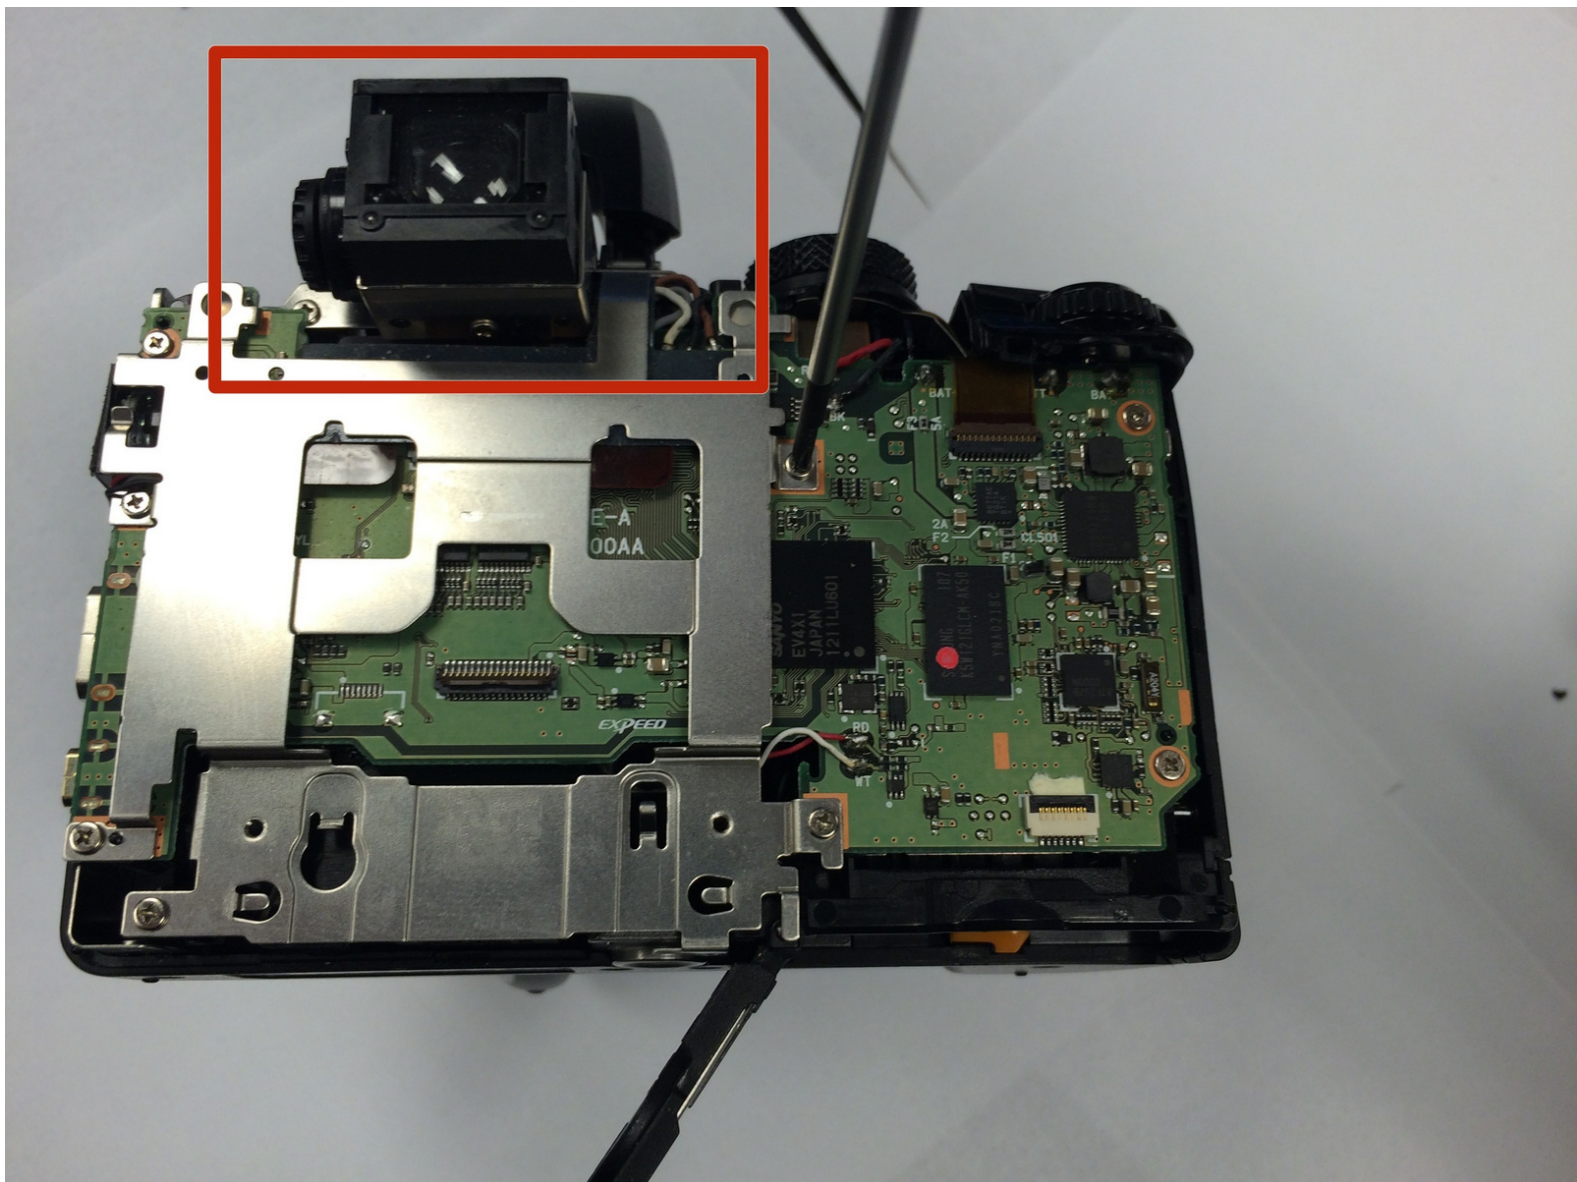

## INTRODUCTION

This will show you how to open up the camera and replace the camera flash.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Motherboard



- Turn the front of the camera toward you.

## Step 2



- On the left side of the camera, use a Phillips #00 Precision Screwdriver to remove the two screws.



### Step 3



- On the right side of the camera, remove the first visible screw.

### Step 4



- Lift the HDMI and A/V OUT cover to access the hidden screw and remove.

## Step 5



- Flip the camera upside down and remove the seven marked screws.

## Step 6



- Remove the two screws hidden underneath the display panel.




## Step 7



- Use a plastic opening tool to gently loosen up the sides of the camera.


## Step 8

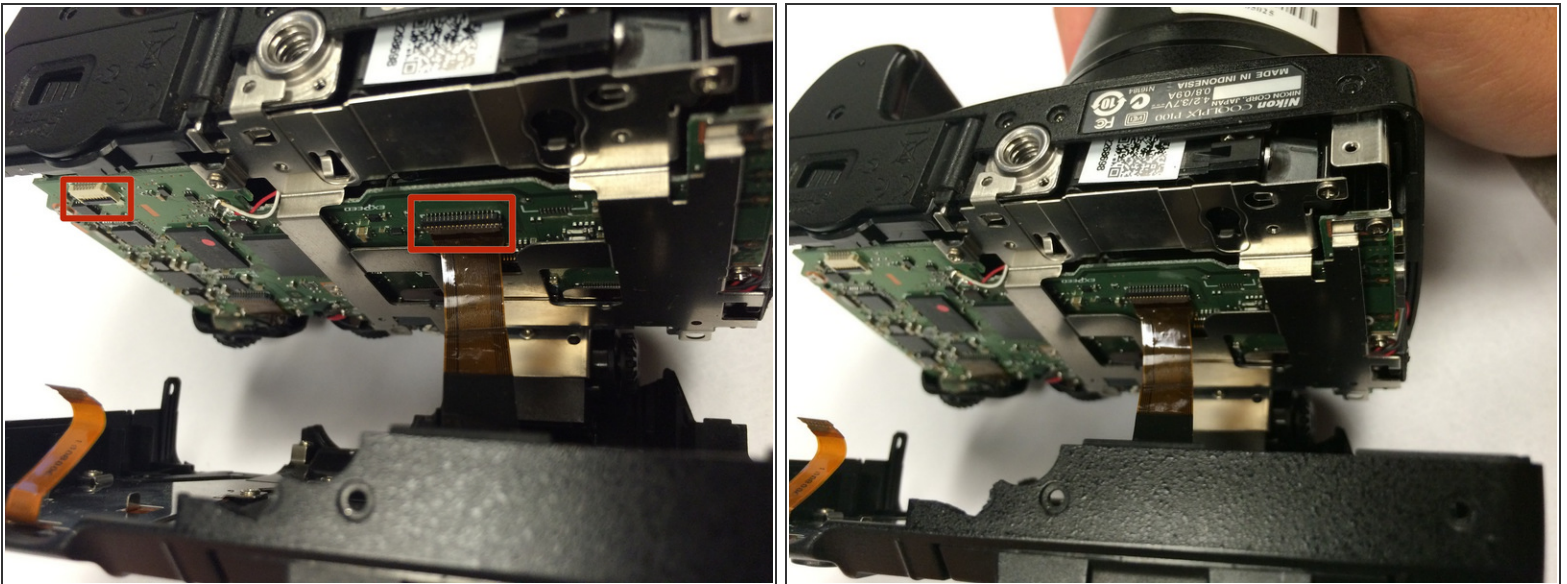

- Carefully open the camera.


⚠ There are two ribbon cables when opening the camera. Make sure to properly detach them before proceeding. [Disassembling Nikon Coolpix P100 Ribbon Cable](#)

## Step 9

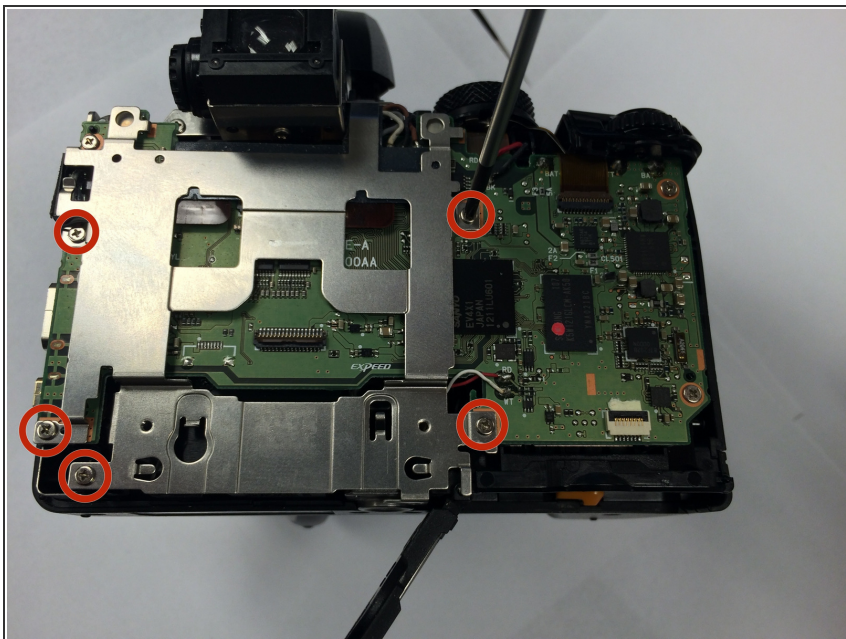

- Now you have partial access to the camera's motherboard.
- Remove the five indicated screws that are attached to the metal plate.


## Step 10

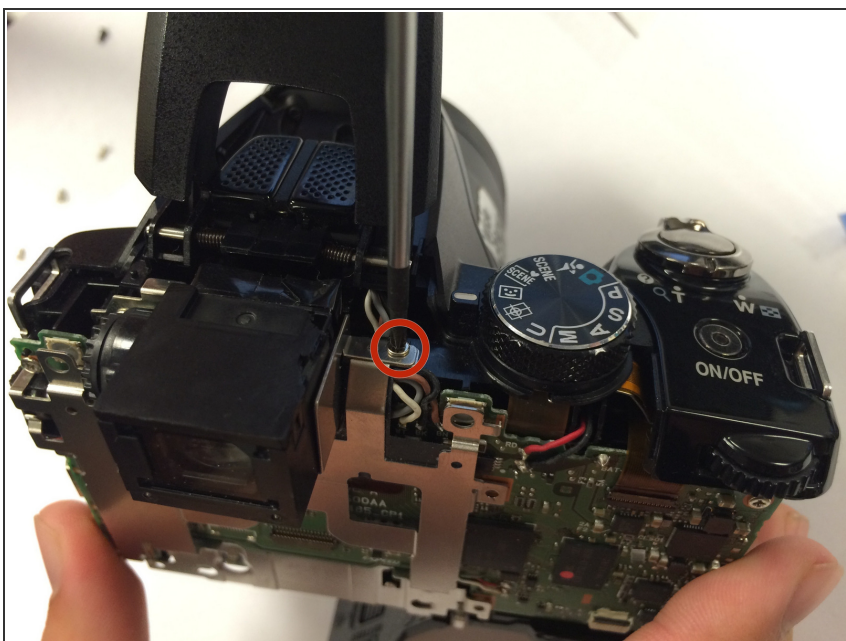

- Remove the hidden top screw that is attached to the metal plate.




## Step 11

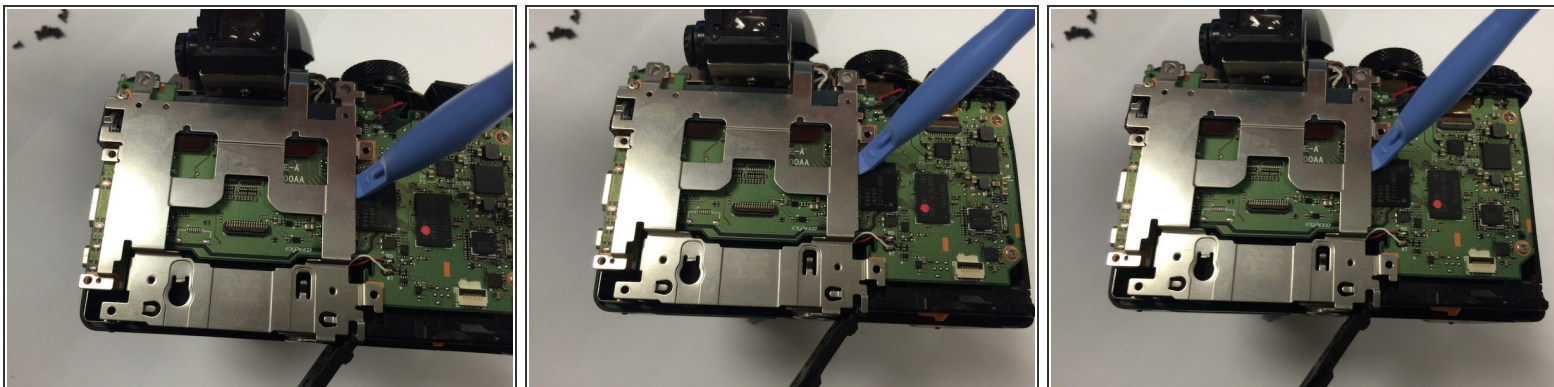

- Use a plastic opening tool to carefully loosen the metal plate.
- Remove the panel to access the camera's motherboard.


## Step 12

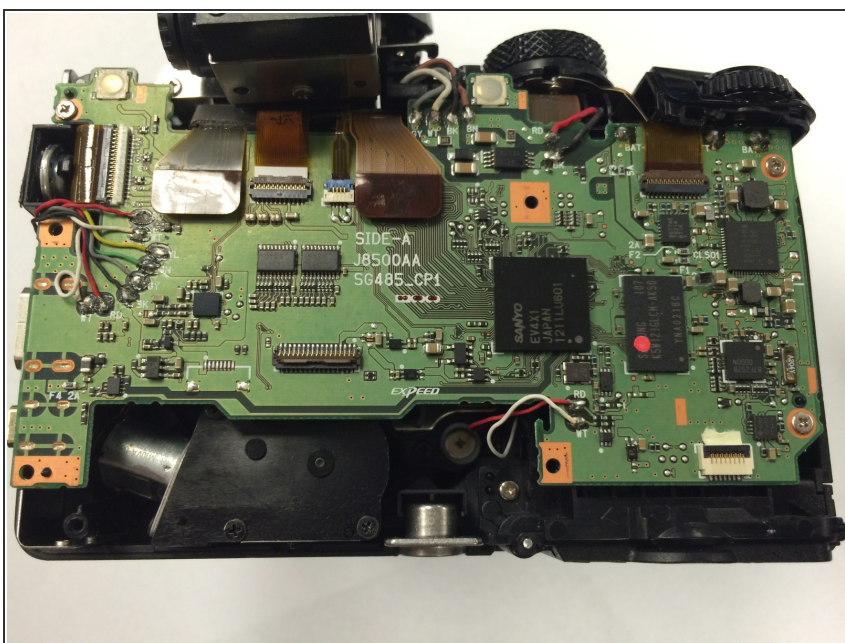

- Now you have access to the camera's motherboard




## Step 13 — Viewfinder

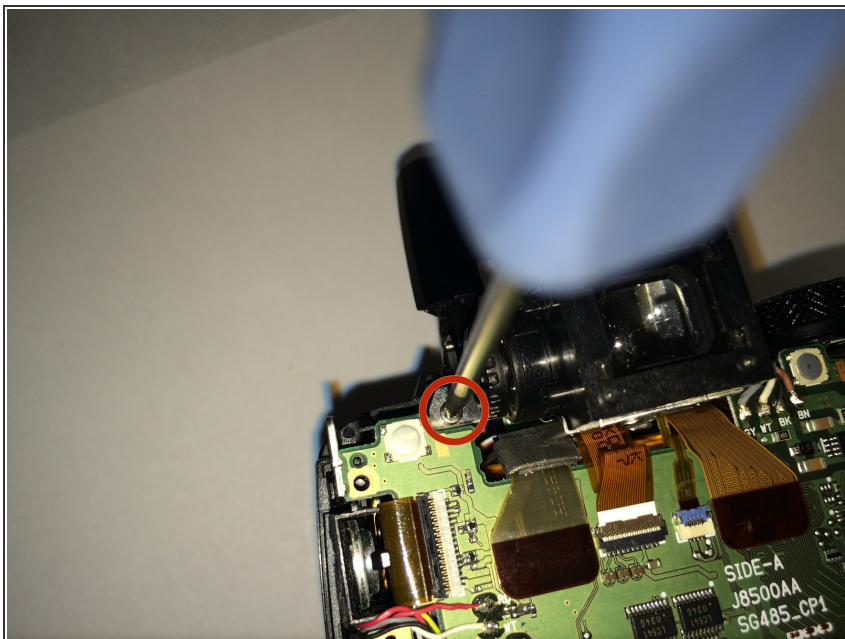

- Remove the screw that is located on the left of the view finder.

## Step 14

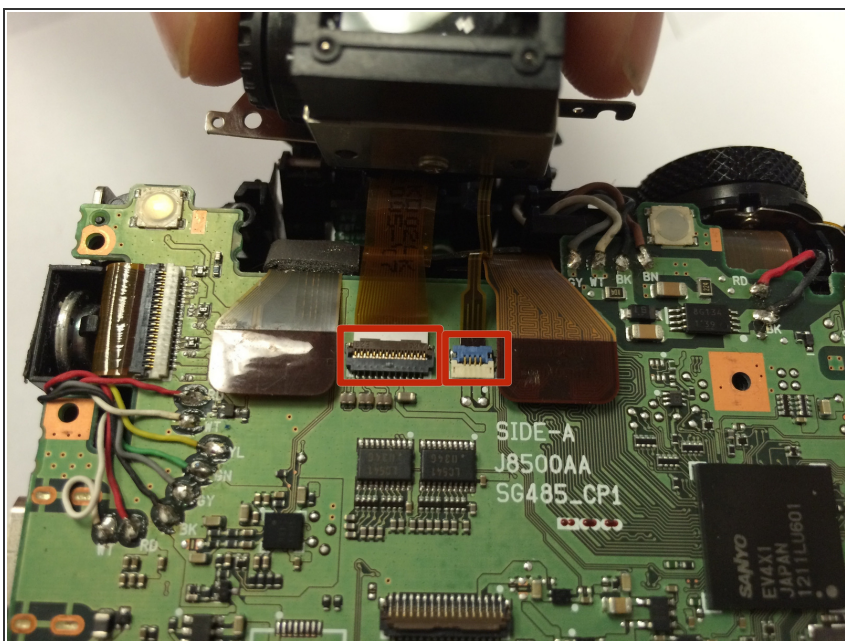

- ⚠ Carefully detach the two ribbon cables and detach the viewfinder.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 02:27:50 PM.